

DAISY PERFECT M ERROR CODES AND THEIR DEFINITIONS

№	Text on the screen	Definition	Comment
1	OVERFLOW	Full Memory. Change Memory Card.	Contact the technician
7	OPER.FORBIDDEN	Fix the error with the following key combination: press the C and then the TL keys.	
11	TOO MANY DOTS		
14	WRONG SYMBOL	A wrong combination of keys is pressed. Turn off/on the cash register to restart it.	
20	INCORRECT KEY	A wrong combination of keys is pressed. Turn off/on the cash register to restart it.	
24	WRONG OPERATION	A wrong combination of keys is pressed. Turn off/on the cash register to restart it.	
66	ERROR 66	Invalid Password	Sumbit valid password
70	** FM NOT EXIST	Memory Damage	
71	** SUBSTITUTION FM	Memory Damage	No work is permitted. Contact the specialist
82	OVERFLOW 24h	Print the Z report	Click the C button and take the daily financial report by restarting
107	** SIM CARD LOCKED	Damaged SIM, needs to be changed	Contact the technician
110	* NEW SIM CARD	Damaged SIM, needs to be changed	Contact the technician
	WRONG SD CARD	Wrong SD card	

Notes

- * It refers to computer mode only. Error is sent to the program and does not appear on the fiscal device.
- ** You can not continue working. Please contact your service provider immediately.