

## DAISY PERFECT S ERRORS AND THEIR DEFINITIONS

No	Text on the screen	Definition	Comment
1	OVERFLOW	Full Memory. Change Memory Card.	Please contact the technical service immediately
7	OPER.FORBIDDEN	Fix the error with the following key combination: press the <b>C</b> and then the <b>TL</b> keys.	
11	TOO MANY DOTS		
14	WRONG SYMBOL	A wrong combination of keys is pressed. <b>Turn off/on</b> the cash register to restart it.	Press C and enter correct value
20	INCORRECT KEY	A wrong combination of keys is pressed. <b>Turn off/on</b> the cash register to restart it.	
24	WRONG OPERATION	A wrong combination of keys is pressed. <b>Turn off/on</b> the cash register to restart it.	Press C and close the receipt
66	ERROR 66	Invalid password	Submit valid password
70	** FM NOT EXIST	Memory Damage	Please contact the technical service immediately
71	** SUBSTITUTION FM	Memory Damage	Please contact the technical service immediately
82	OVERFLOW 24h	Print the <b>Z report</b>	
107	** SIM CARD LOCKED	Damaged SIM, needs to be changed	Please contact the technical service immediately
110	** NEW SIM CARD	Damaged SIM, needs to be changed	Please contact the technical service immediately

	WRONG SD CARD	Wrong SD card	
--	---------------	---------------	--

## Notes

- \* It only appears while working on Personal Computer. Therefore, there is no text.
- \*\* You can not continue working. Please contact technical service provider immediately.