












Operating manual

Fiscal Printer Daisy FX 1300

- **Switch to autonomous mode**
(Without PC management)

To work in autonomous mode, the fiscal printer has 3 function keys F C M. To switch the mode, via the ON / OFF switcher turn on the fiscal printer. A short voice signal will be heard and the diode will start flashing in red for 3-4 seconds. When the diode is flashing, press one of the buttons (F C M), after a long voice signal, a receipt with the inscription "Autonomous mode" will be printed out.

- **Definition of buttons**

Button	Sub-mode	Button	Function	Description
	Reports		X-report	printing X - report.
			Z - report	Printing Z - report.
			SE-Report	Printing goods report
	FM [Fiscal . memory.]		short	Printing FM short report for the whole period [only for fiscal FM].
			FM test	Return to the status of the FM [It must be "FM OK"]. After this test, click one of this buttons to return to the main menu: "F", "C" and M".
	Tests		screen	This test checks the correctness of all the signs listed in the table of codes. To change the screen we are back to the main menu and press the button "C"
			Diagnostics	A receipt containing diagnostic information is printed.
			ASCII	Table of ASCII

- **Restart instruction**

Via the switcher button ON/OFF, turn off and turn on the fiscal printer. When turning on, it will emit a voice signal, press the button C and then the button M. Again, turn off and on the printer according to the instructions above. After switching on, a green light turns on, which means that the device has been successfully restarted.

- **Definition of fiscal printer ports**

- 1) USB port
- 2) Cash drawer
- 3) RS232 COM port
- 4) Outside power supply
- 5) User display

