

Operating manual

ZIT B20

- **Cancellation of an incorrectly printed or refunded receipt**

To cancel an incorrectly printed receipt, the accountant of the company fills out a special application form on the RS.GE portal, the receipt to be canceled or a copy of the receipt is attached to the application.

- **Turning on the cash register**

To turn on the cash register, press the power button in the upper right corner of the keyboard for a few seconds.

- **Entering the cash register into operating mode**

To enter the working mode, press the key on the keyboard  several times until {დაყოფის} is displayed on the screen.

Dial the number [1] and press the [TOTAL] button, the display will read [0,00].

To issue a receipt, type the desired amount on the keyboard and press the section key [DP1]. The receipt will start printing.

Press the [TOTAL] button to print a check for the customer

For example, to write 7 GEL and 25 Tetri, type:

[7] [.] [2] [5] _____ amount

[DP1] _____ section button

[TOTAL] _____ Printout

If you want to enter multiple amounts in the receipt, type the amount, specify the section number, then type the next amount again, specify the section, etc.

Finally press the [TOTAL] button to print the final receipt.

- **Correction of incorrectly entered amount and / or cancellation of receipt**

If the amount is entered incorrectly, press [C] to delete

If you have entered the amount, fix it in the section and if you have not yet closed the receipt, press the [VD] button, the amount will be canceled. Press the [TOTAL] button to finally print the receipt.

- **Printing a Z report**

Note that at the end of each working day it is mandatory to print out the shift closing [Z] report.

To print the Z Report, press the button  repeatedly until [Z Report] appears on the screen. Enter the password [9999], then press the [TOTAL] key 2 times. [Z] report printed.'

- **Activate the disconnected cash register**

After the antenna appears on the right side of the screen, press the button  repeatedly until the screen says "პროგრამირება", then dial "9999" and confirm with the [TOTAL] button, it will say "PROGR". Dial 1853 and press [VD]

If successful, [SUCCESSFUL] will be displayed on the screen. After that you can continue working.

If the cash register says „სერვერ.კავ.პრობ“ and/or „გააგზ.მონაც.სერ“, press the [C] key and try restarting again.

- **Note**

In case the cash register screen displays:

„ქაღალდი გათავდა“ - means that the paper has run out of thermal paper at the cash register, or the paper cover is closed incorrectly

„შესრულდა 24 საათი“ - Print the Z report

„შეცდომა 82“

“არასწორი დილაკი” - press "C" and then "TL" button